


PEN

one pendant for 3 purposes

LUXTRON
SYSTEMS

*one pendant
3 mounting options*

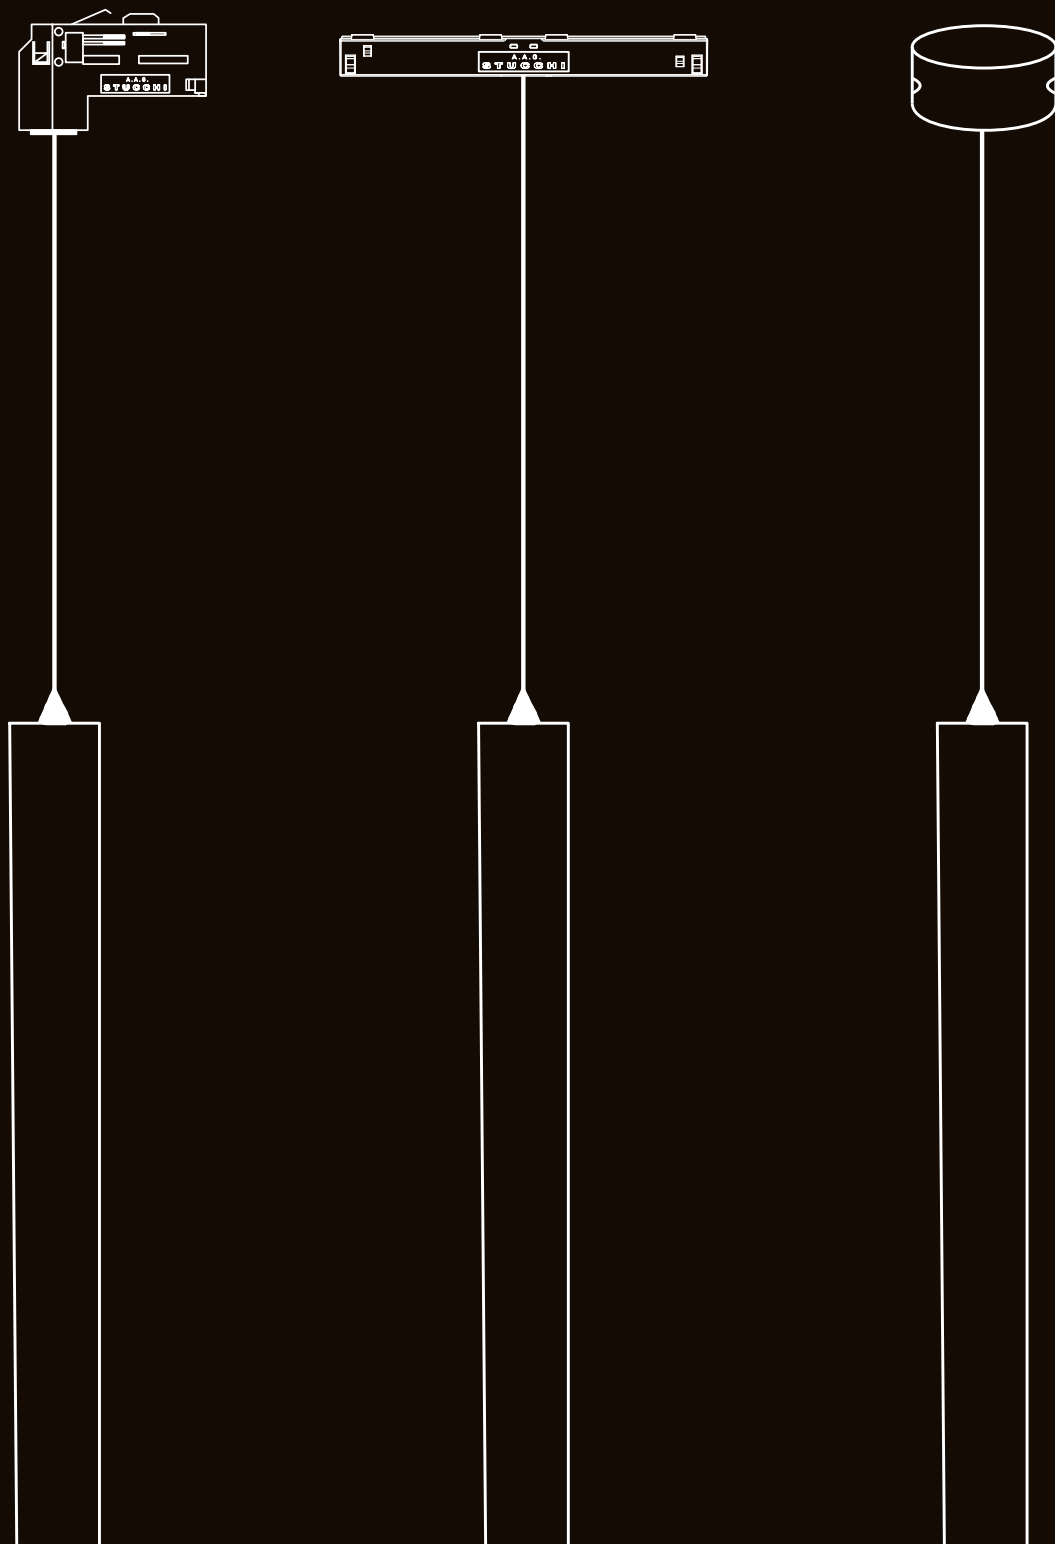

PEN – MAG / ONETRACK / SM

specifications sheet — 6 / 10 W

DISCLAIMER

All values marked in this document rated values. Luxtron uses tested products and components from leading component manufactures, however there may be isolated instances of technology related failures of individual LEDs during the rated product lifetime. International standards set the tolerance in initial flux and connected load at $\pm 10\%$. Color temperature is subject to a tolerance of up to ± 150 Kelvin from nominal value. These values apply to an ambient temperature of 25°C

*Standalone, Magnetic
or Track Mounted!*



15°
Narrow



24°
Middle



36°
Wide



COB

Compatible with
A.A.G. Stucchi
ONETRACK and
MULTISYSTEM




Technical Data

Load Wattage	6 W 10 W
Input Voltage	(A) 220 - 240V AC (50-60 Hz) (B) 48V DC for MULTISYSTEM Tracks
Beam Angle	15° / 24° / 36°
Luminous Flux	620 lumens @ 6 W 930 lumens @ 10 W
Color Temperature	3000 / 4000 K others available on request
Color Rendering Index	80 / 90
Dimming Protocols	DALI-2 / Wireless / 1-10V Phase-Dim
Mounting Options	ONETRACK MULTISYSTEM (MAG) Surface Mounted (SM)
Dimensions	$\Phi 50 \times H300$ mm Wire length: 1000 mm
Lamp Body Color	Black / White

Dimensions

Mounting
Options

ONETRACK

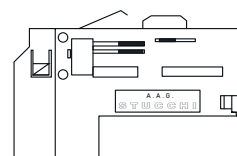


Surface
Mounted





MULTISYSTEM





300 mm

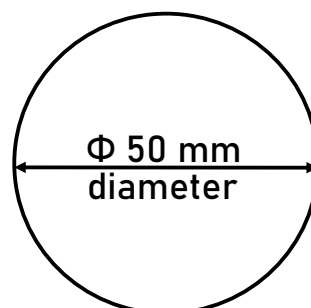

1. Insert the adapter into the track, so that the mechanical key (A) in the adaptor matches the groove (B) in the track.

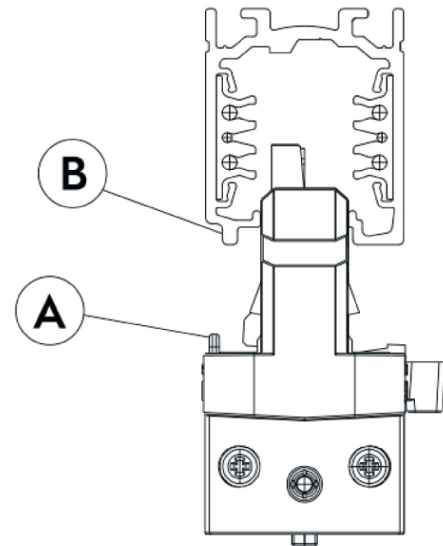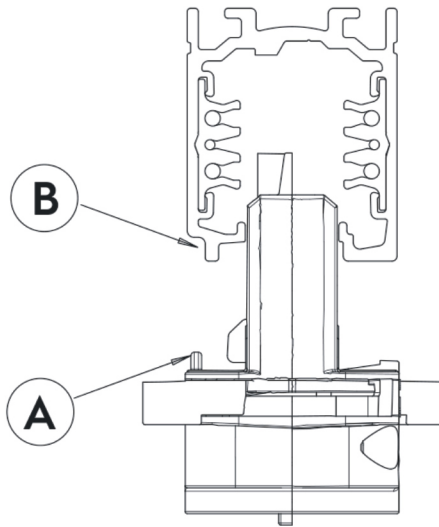

2. Rotate of about 90° the levers of the two cams (C & D) until they are securely locked into the track. Some models might have only one cam depending on dimming protocols chosen.

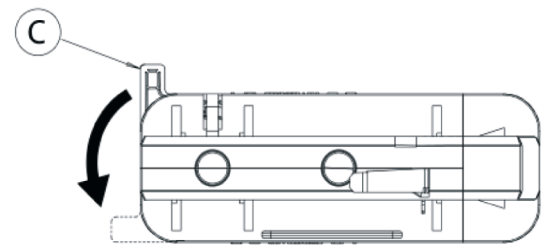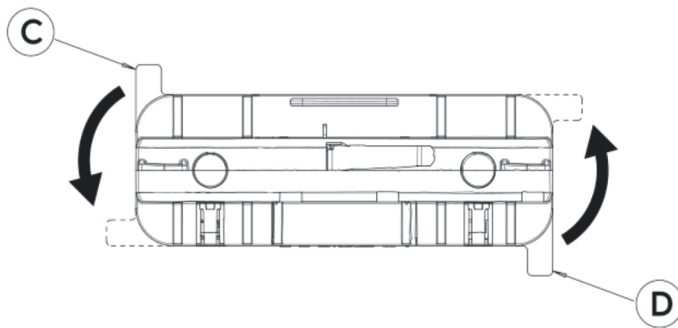

3. When the track is connected to a three-phase system, it is possible to select the phase the phase can be selected (L1, L2 or L3) to distribute power to single luminaires in the system.
4. This phase selection is done by the selector (A) of the adapter.
5. The phase selector must be switched on only during the installation by skilled personnel.

