


WARNINGS

- **INSTALLATION SHOULD ONLY BE PERFORMED AFTER POWER TO THE FIXTURE HAS BEEN DISCONNECTED.**
- This product is suitable for indoor use only.
- Do not attach to surfaces which are damp, freshly painted or electrically conductive.
- Not suitable for mounting on flammable surfaces.
- Do not cover the heatsink of the downlight.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.

INSTALLATION INSTRUCTIONS

1

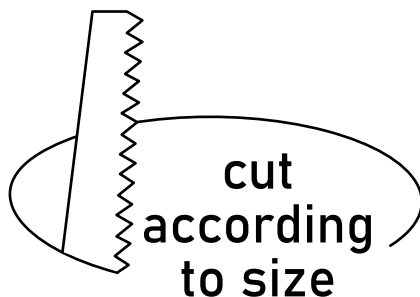


for other models, cut out sizes are mentioned in datasheets

Models	Cut Out Sizes
Alena 106 Round	95 mm
Alena 132 Round	120 mm

2

remove
plastic
reflector
on top

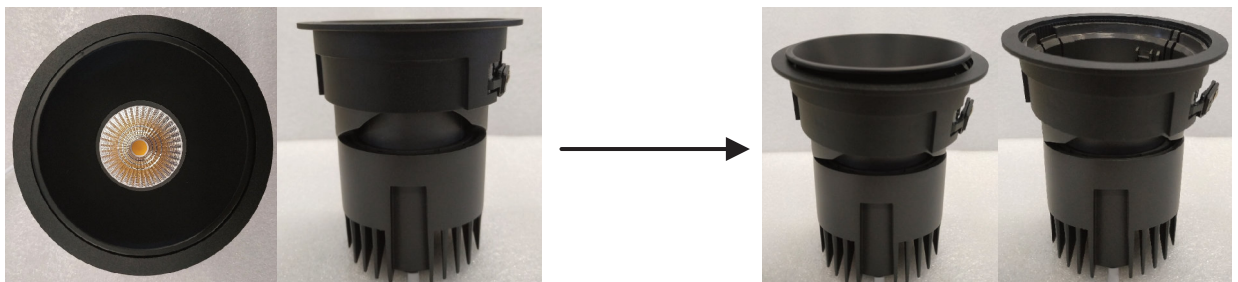

3

adjust the
recessed mounting
bracket according
to ceiling thickness

for ceiling < 10 mm




for ceiling 10-20 mm




4

wire the mains to the LED driver and connect to the LED downlight using the provided connector

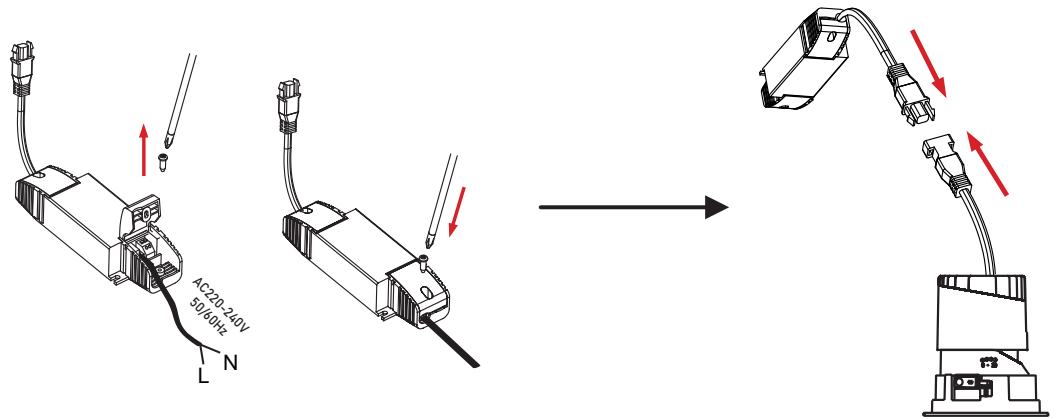

5

insert the LED downlight into the ceiling and make sure the brackets are anchored and in place once inserted.

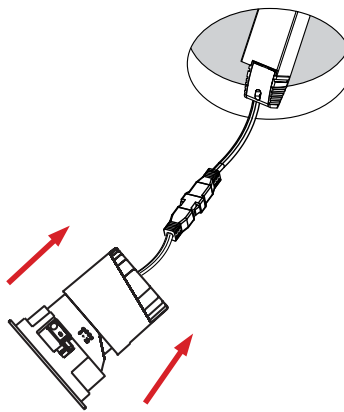

6

once installed and aimed at illumination point, fix the product in place using the hex key in the box



match the fixing positions to install the plastic reflector back in place



7

You're done!



1 LED engines for all use cases!