


WARNINGS

- **INSTALLATION SHOULD ONLY BE PERFORMED AFTER POWER TO THE FIXTURE HAS BEEN DISCONNECTED.**
- This product is suitable for indoor use only.
- Do not attach to surfaces which are damp, freshly painted or electrically conductive.
- Not suitable for mounting on flammable surfaces.
- Do not cover the heatsink of the downlight.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.

INSTALLATION INSTRUCTIONS

1




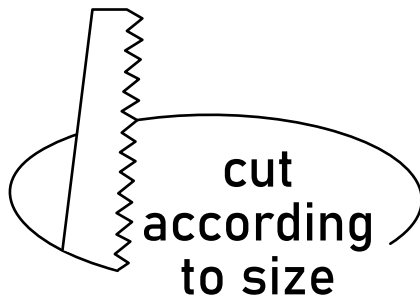


for other models, cut out sizes are mentioned in datasheets

Models	Cut Out Sizes
Alena 60 Round	50 mm
Alena 86 Round	75 mm


2

Wire and insert the supplied LED driver inside the cut-out

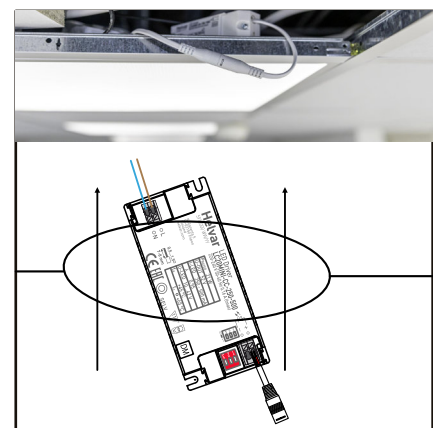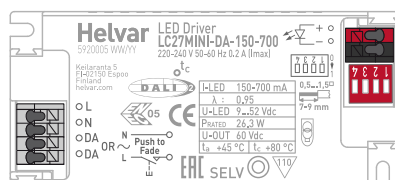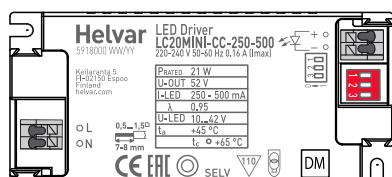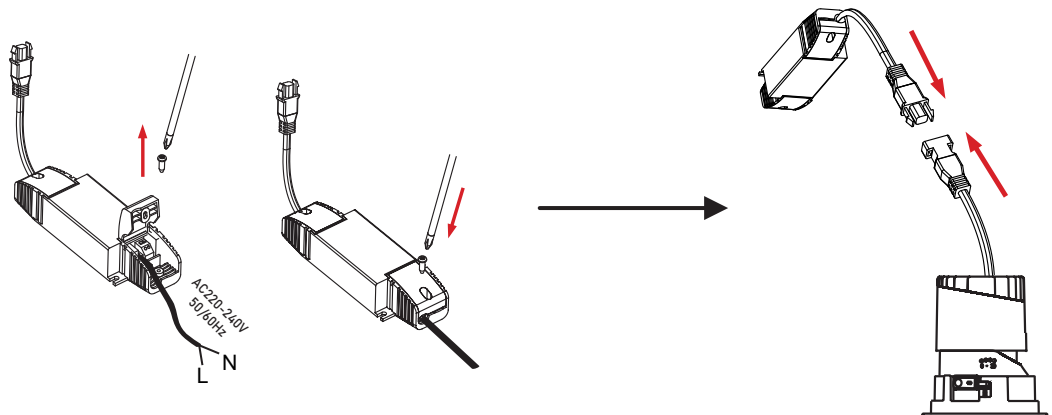

3

insert the LED
downlight into the
cut-out and make
sure the downlight is
set in place once
inserted.

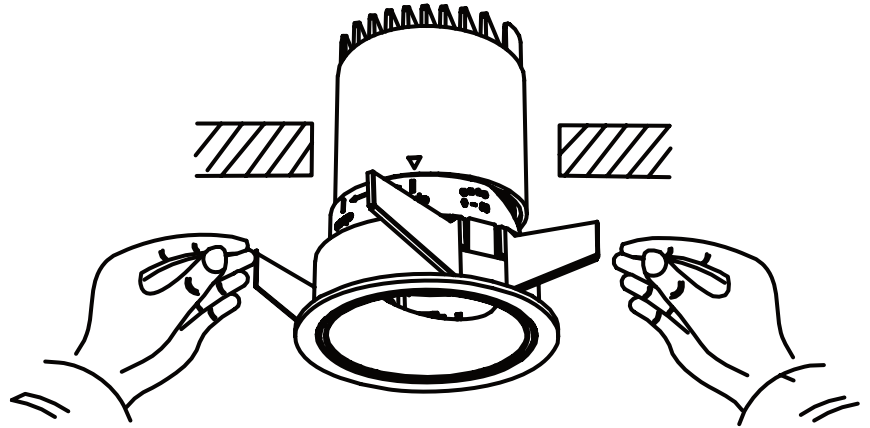

4

You're done!

*1 LED engines for all
use cases!*

